



AUDIO BIBLE QUICK START GUIDE

EASY START: PRESS POWER BUTTON FOR 2 SECONDS TO TURN ON (PLAYER WILL BEEP ONCE FOR ON). TO SAVE YOUR PLACE, PRESS PAUSE FIRST THEN TURN PLAYER OFF (PLAYER WILL BEEP TWICE WHEN YOU TURN OFF).

Always turn the unit off before charging

AudioBible.com

AudioBible.com

POWER

HOLD 2 SECONDS

1 BEEP = ON

2 BEEPS = OFF

TESTAMENT

OT, PSALMS, NT

BOOKS

CHAPTERS

REWIND

VOLUME

BOOKS

CHAPTERS

FAST-FWD

PAUSE

PRESS TO PAUSE
PRESS AGAIN TO RESUME

BOOKMARK

PRESS PAUSE THEN TURN PLAYER OFF
PLAY WILL RESUME WHEN TURNED ON

